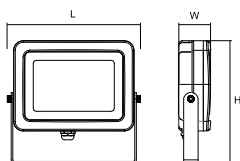
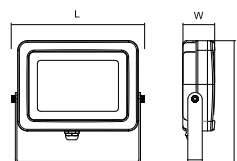



Model: 3871, 3872, 3873


Voltage: 220-240V Weight: 2600g
 Projected area: 300*306mm
 Beam Angle: 110°
 Size: 300*60*306mm
 Material: Aluminum


Model: 3877, 3878, 3879

Voltage: 220-240V Weight: 4880g
 Projected area: 430*408mm
 Beam Angle: 110°
 Size: 430*73*408mm
 Material: Aluminum


Model: 3874, 3875, 3876

Voltage: 220-240V Weight: 4680g
 Projected area: 430*408mm
 Beam Angle: 110°
 Size: 430*73*408mm
 Material: Aluminum

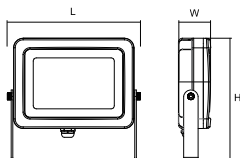

LED Floodlight User Manual

Important User Advice

This Product is Class I and must be Earthed.
 Always switch off mains supply before fitting.
 Replace any broken or damaged glass as soon as possible.
 Ensure all seals are intact and operational after fitting or maintenance.
 Do not touch the lamp in use or just after use as there is a risk of being burnt.
 Take off from flammable materials.
 Do not wash the lamp.
 Keeping your eyes with a security distance, the light could cause damage.

Installation




Find a suitable location to install this product.
 Prepare the mains wiring.
 Use the mounting bracket to mark the hole centres for fixing.
 Drill holes suitable to accept wall plugs. Insert wall plugs.
 Ensure mounting bracket.
 Terminate wiring. Pay particular attention to any markings for Replace all covers.
 Fit the floodlight to the mounting bracket with the screws.
 Check seals, gaskets and cable gland operation before testing the luminaire.
 Turn on power supply and test luminaire.

Maintenance

This produce has no user serviceable parts.
 Clean with a damp cloth and dry with a lint free cloth or kitchen towel.

Important Information


It is recommend that luminaire installed and fitted by a qualified electrician ensuring the installation complies to the current building regulations. These products are designed for connection to a 220-240V supply. And broken or damaged parts should be replaced as soon as possible. LEL will not accept responsibility for any claims arising from a poor installation.

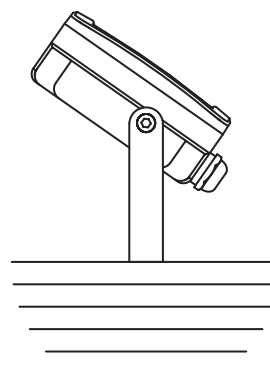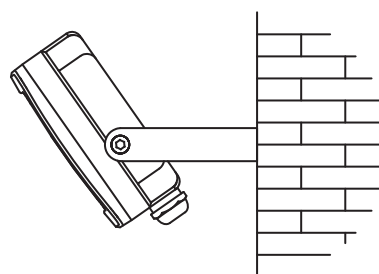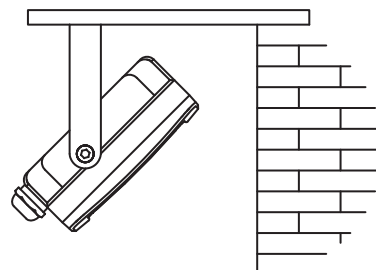

Wire connection guide


Step One.

Use screw driver remove the back cover three screws.

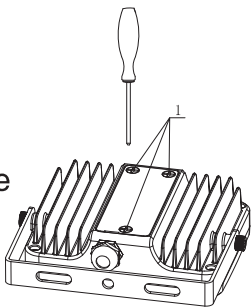


Step Two

Take off the back cover.

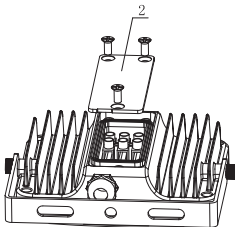


Step Three

Take off the metal screw and rubber ring.

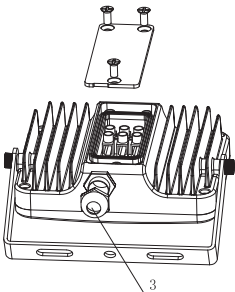


Step Four

Put the cable into the metal screw, then put the cable into rubber ring. Connect the cable into the inside junction box.

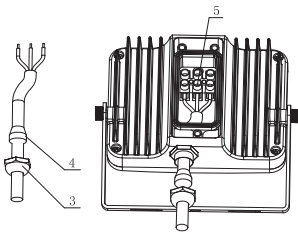


Step Five

Fix the metal screw on cable.

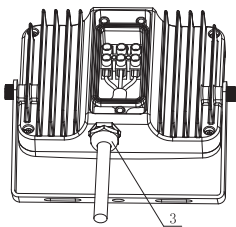

Step Six

Fix the back cover screw.

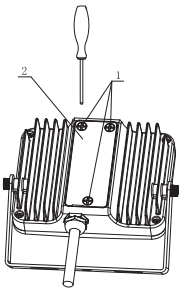

1:screws. 2:the back cover. 3:the metal screw. 4:the rubber ring. 5:the inside junction box.

Note:

The brown wire is connected with the L wire of city electricity.
The blue one is connected with the N wire of city electricity.
The green/yellow one is connected with the earth wire.
Power Cord type: H05RN-F 3 x 1.5mm².

